


LitoRemote™ Infrared Remote Control – User Instructions

1. For the first time use, please pull out the plastic separator at the battery holder.
2. Attach the Remote Control Infrared LED into the larger hole located on the LitoDrive side bracket.
3. **Press button ON each time you want to activate the Remote Control, and then follow the table below for the required button pressing.**
Please note that the interval between the two operations should be less than ten seconds, otherwise the Remote Control will be locked OFF. You must press button again in order to reactive the Remote control.
4. You may lock OFF the Remote Control any time by pressing the OFF button.

Table 1. Function Instructions		
Function	Button	Set-Up
ON	ON	Activate the LitoRemote
SET	SET	Not in use
OFF	OFF	Set to the minimum current
Fine tune	+	Press to increase 0.1%
	-	Press to decrease 0.1%
Quick Tune	10%	Set to 10% rated max. current
	20%	Set to 20% rated max. current
	30%	Set to 30% rated max. current
	40%	Set to 40% rated max. current
	50%	Set to 50% rated max. current
	60%	Set to 60% rated max. current
	70%	Set to 70% rated max. current
	80%	Set to 80% rated max. current
	90%	Set to 90% rated max. current
	100%	Set to 100% rated max. current

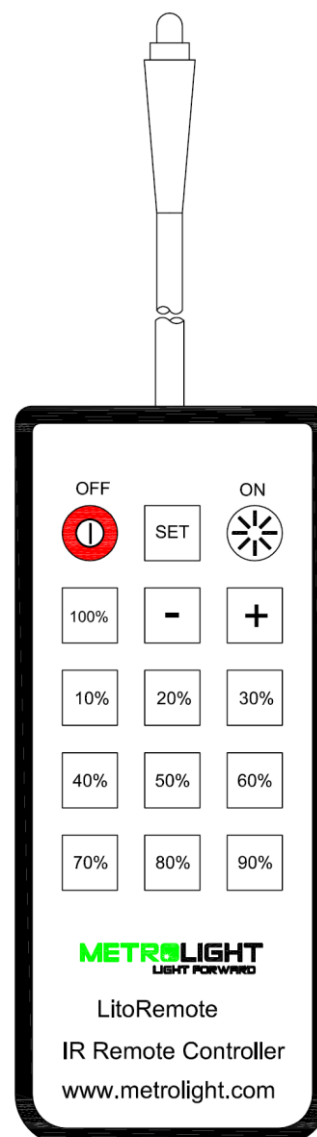

Note: The Quick Tune may not accurately set the percentage of the maximum available current. For accurate setting of the output current, please proceed using the Fine tune keys, until getting the accurate current desired.